

Operation Manual

For CRU, GDU, DS, GD, UIP, HUI, TBCR, DCD, ECMR Units “R” version



CARBON ZAPP
INNOVATION DRIVEN

Contact Information

Carbon Zapp

364 Varis – Koropiou Ave

Athens – Koropi / 19400

GREECE

Support / Sales Telephone: +302109856110

Support email: support@carbonzapp.com

TeamViewer email: tv@carbonzapp.com

Sales email: office@carbonzapp.com

URL: www.CarbonZapp.com

Warranty

2 -Year Limited Warranty

Carbon Zapp company manufactures its equipment from new parts and components that are in accordance with industry standard practices. Carbon Zapp warrants that the equipment it manufactures will be free of defects in materials and workmanship.

The warranty terms are 2 years, beginning on the date of the Carbon Zapp invoice in accordance with the following described:

This warranty does not cover damage due to external causes, including accident, abuse, misuse, scratches on external components or surfaces, problems with electrical power supply, servicing not authorized by Carbon Zapp, usage not in accordance with machine's operating manual, failure to perform required preventative maintenance, failure to change the calibration oil and other ultrasonic cleaning or testing fluids regularly, failure to change the main testing and flushing fluid (were applicable) filter when needed, to permit machines fluid pump to sit or operate without fluid in it, usage of improper testing or cleaning fluid in the machine, usage of improper ultrasonic cleaning fluid in the ultrasonic bath, usage of ultrasonic fluid instead of testing fluid or the opposite, usage of cleaning solvents and chemicals not provided or indicated/approved by Carbon Zapp, use of parts and components not supplied or approved by Carbon Zapp.

Note: Failure to clean injectors with Carbon Zapp's ultrasonic device before any test is performed on the test bench will void the warranty of the machine, if dirt particles from the injectors or components tested enter the machine and valves.

Assure all inline screen filters and HD inline filters are mounted and replaced periodically according to machine indications otherwise warranty is voided.

Carbon Zapp will repair or replace parts and components returned to manufacturer's facility. To request warranty service, contact Carbon Zapp within the warranty period. If warranty service is required, you must ship the defective part or component in their original or equivalent packaging, prepay shipping charges, and insure, or accept the risk of loss or damage during shipment. Carbon Zapp will return the repaired or replacement part or component freight prepaid. If Carbon Zapp repairs or replaces a part or component, its warranty term is Not Extended.

Carbon Zapp does not accept liability beyond the remedies set forth in this warranty statement or liability for incidental or consequential damages.

Machine serial number: _____

Signed by: Technical Department: _____

Date: ____ / ____ / ____

Contents

Contact Information	2
Warranty	3
General Information	7
Warning and Safety symbols	7
Definition of Terms and Abbreviations	7
Product Description	12
CRU.4R.....	12
CRU.2R.....	13
GDU.4R.....	14
GDU.2R.....	15
DS-R.....	16
DSF-R	17
GD-R.....	18
UIP-R.....	19
HUI-R	20
TBCR.....	21
DCD	23
ECMR.....	24
Adapters.....	25
Flush-Adapter	25
SPR	25
RSP	25
CRIN	26
EUI.....	26
HEUI	26
Commissioning	27
Installation	27
Electrical Connections	27

Compressed Air Connections	27
Attachment Unit Connections	27
Filling the Tanks	29
Tank Level Sensors	30
Degassing the system	30
Filling the Spray Chamber	31
Switch On/Off the Control Panel / PC	31
Software Setup	31
Language Selection	31
Wi-Fi Setup	31
Printer setup	32
Personal Data / Accounts	32
Connection to the PCB / DEMO Mode	33
Software Orientation	34
HOME	34
User Logins:	35
SETTINGS	36
INJECTOR/COMPONENT SELECTION	36
CUSTOMER DATA	37
COMPONENT DATA	37
CFL 1/2/3	38
ADJUST HP	39
EUI	40
CRP	40
SELECT TESTS	41
MACC	42
TEST (###)	44
REPORTS	46
REPORT VERSIONS	47
SHARE	48
Save to USB	49
Operation	50
Before Testing	50
Setting up the injector(s) / Pump	50

Operation Manual – “R” Units

Cleaning and Testing the Injector(s).....	50
Results and Reports	52
Maintenance	53
Regular Maintenance	53
Troubleshooting	55
Technical Specifications	56

General Information

Warning and Safety symbols



: CAUTION, High Pressures



: CAUTION, Hot Surface(s)







: Always wear protective gloves




: Always wear protective goggles

Definition of Terms and Abbreviations

Throughout the manual symbols or abbreviations are used to describe a test, a function or something similar. Below is a list of the most commonly used:

-  : Symbol used for Testing Tank / Fluid / Fill Port / Drain Valve. Use only specified fluid in Specifications area of this manual.
-  : Symbol used for MACC (Cleaning) Tank / Fluid / Fill Port / Drain Valve. Use only specified fluid in Specifications area of this manual.
-  : Symbol used for Hydraulic Oil Tank / Fluid / Fill Port / Drain Valve. Use only specified fluid in Specifications area of this manual. This tank is available only in HUIr units.
-  : Injector Harness Connection. Use the provided harness(es) in the adapters kit. Some units have additional cables to connect on the main harness,

and provide adaptability to other, non-universal injector sockets. For multi slot units, the making 1/2/3/4 is used to denote the slot #.

-  **sensor**: Injector Sensor Connection. Use the provided harness(es) in the adapters kit. Some units have additional cables to connect to other sensors like BIP. For multi slot units, the making 1/2/3/4 is used to denote the slot #.






- **discharge**: Port for measuring the Discharge Volume of the Injector/Component. For multi slot units, the making 1/2/3/4 is used to denote the slot #.



- **return**: Port for measuring the Return Volume of the Injector/Component. For multi slot units, the making 1/2/3/4 is used to denote the slot #.
- **1/2/3/4**: For multi slot units, the making 1/2/3/4 is used to denote the slot #.

HPR


- **HP Rail**: The Common Rail output port(s). Connect appropriate HP Hoses, approved by your Service Provider. Since it is a common rail, use HP Plugs to plug the unused ports in a multi slot machine.
-  **Air Input**: The main are port for the machines. Always look in specifications to adhere hose diameter, lengths and compressor power and capacity.
- : Attachment port/cable, used to connect a main unit to the attachment unit.
- **100-250 VAC**
50/60 Hz: Mains Power Supply Plug.






High

- **Pressure**: HUIr unit Hydraulic High Pressure Oil Port for connection to the HEUI Adapter port.

OIL
Return

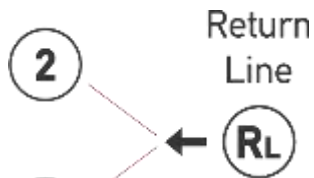-  : HUIr unit Hydraulic Oil return port from the HEUI Adapter.





-   : Connect the Return Hose from the UI Adapter. Use Position 1 or 2 depending on the injector type. Pos.1: Regulated Return (Most commonly used), Pos.2: Free Return (VW PDE, CUMMINS, FORD POWERSTROKE).




Feed

- **Line:** Connect to the Feed port on the adapter of the UI injector. When 2 Ports on the adapter are horizontally aligned, the order is arbitrary, when the ports are vertical, the Port marked with a DOT is the Feed Port.

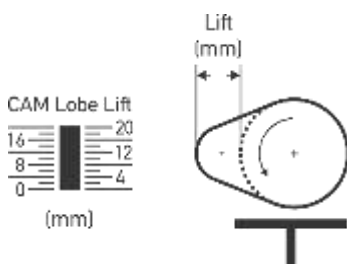

-  : Use this indicator to adjust the CAM lift of the EUI Injector Plunger.

-  : USB Port for connecting USB Stick/Drive, USB Printer, USB Mouse/Keyboard.

-
- Package version: Software version
- APK version: Application version
- ADB version: Database version
- MDB version: Machine version

- AVR version: Firmware version
- FPGA version: Hardware version
- TeamViewer QS: A portal for internet support



- : Back button, goes back one step



- : Provides screen specific option

- SLOT #: (On multi slot machines only) Activate/deactivate operation of specific slot

- MACC: Cleaning / Flushing Function



- : Shows/Hides the the list of tests to be executed

- R2LC: Electrical Test of component

- aNOP: Automatic Nozzle Opening Pressure Test (RSP adapter needed)

- RSP: Response test. Measure the Delay from injector actuation to injection (RSP adapter needed)

- BIP: Solenoid Delay test. Measures the Delay from injector actuation to solenoid charge (BIP adapter needed)

- iVM/DFi: Dynamic Volume Metering test. Measure Discharge and/or Return Injection Volume

- LKT: Static Volume Measuring of Return Volume.

- mm3 VS mg: mm3 is Volume(V) and mg is Mass(m). Some machines have an advanced measuring unit that measure mass. An approximation volume to mass (as a dynamic, under HP pressure flow) would be “ $V=m/0.775$ ”.

- TP: Test Plan, a set of parameters for a specific test, comprising of Strokes, Pulses, Pulse Width, Pressure etc.

- STRK: Strokes per minute.

- BRF is a backup and restore file, accessible inside the settings, to backup and restore the Reports, UserDB and Personal info and Sensor Calibration Data, via USB. Please note that this file is specific to each machine and it will not be directly compatible when used in other units. All reports and DBs will be completely replaced by the restored ones.

- CRG/BRG/DRG are Re-Generation Features for the Piezo stack for Conti, Bosch and Denso Piezo injectors respectively. This feature will repair injector to increase their injection volume.
- CGL is Conti Gap Lift Feature that will diagnose the condition of the stack for Conti injectors and provide information for its repair.

Product Description

CRU.4R

Intended Use

This unit can automatically and fully Test up to 4 Common Rail Injectors simultaneously. It has the capability to fit SPR and RSP adapters on Common Rail injectors. In addition, it supports EUI (UIPR-A) and HEUI (HUIR-A) Attachment units, that can perform testing of these Pump-Injectors 1-by-1 and also use RSP and BIP adapters. This unit uses a Dynamic Mass Metering system and can do Coding on select injectors.

Front View

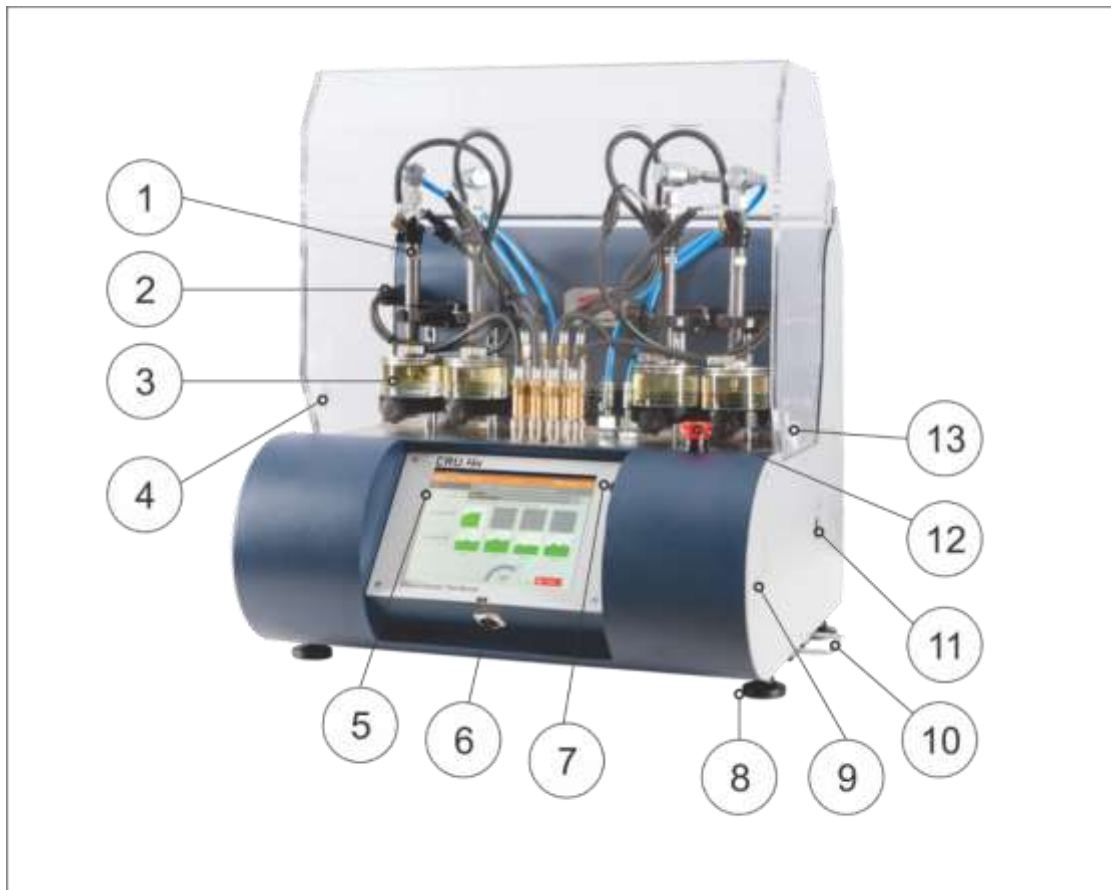


Figure: CRU.4R

1. Diesel Injector (Not included)
2. Injector Harness Cables
3. Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED
4. Protective Hood
5. Control Panel / PC
6. USB Port
7. On/Off Switch for PC
8. Cushioned / Adjustable support pads
9. Air Vents
10. Carrying Handles
11. Test Oil level Indicator
12. Emergency Stop Switch
13. Test Oil Fill Port

CRU.2R

Intended Use

This unit can automatically and fully Test and Clean up to 1 Common Rail Injector simultaneously. It has the capability to fit SPR and RSP adapters on Common Rail injectors. In addition, it supports EUI (UIPR-A) and HEUI (HUIR-A) Attachment units, that can perform testing of these Pump-Injectors 1-by-1 and also use RSP and BIP adapters. This unit uses a Dynamic Mass Metering system and can do Coding on select injectors.

Front View

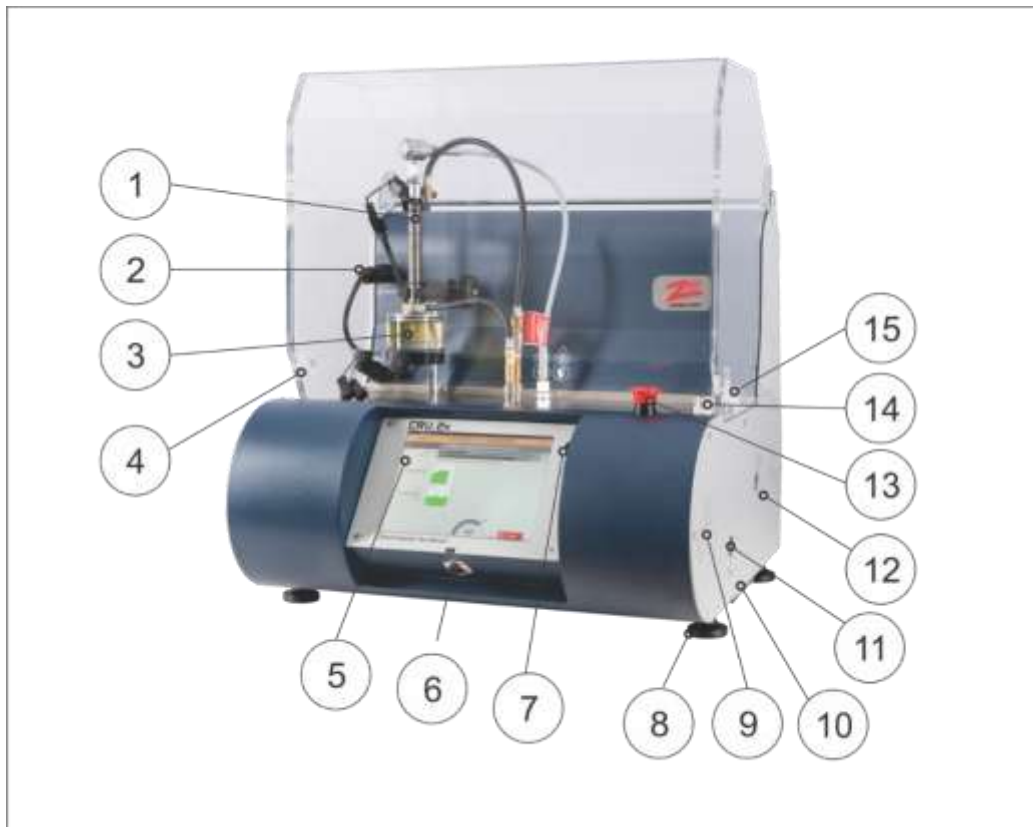


Figure: CRU.2R

1. Diesel Injector (Not included)
2. Injector Harness Cables
3. Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED
4. Protective Hood
5. Control Panel / PC
6. USB Port
7. On/Off Switch for PC
8. Cushioned / Adjustable support pads
9. Air Vents
10. Carrying Handles
11. MACC level Indicator
12. Test Oil level Indicator
13. Emergency Stop Switch
14. MACC Fill Port
15. Test Oil Fill Port

GDU.4R

Intended Use

This unit can automatically and fully Test up to 4 HP Gasoline Direct Injectors simultaneously. It has the capability to fit SPR and RSP adapters on Common Rail injectors. This unit uses a Dynamic Mass Metering system.

Front View

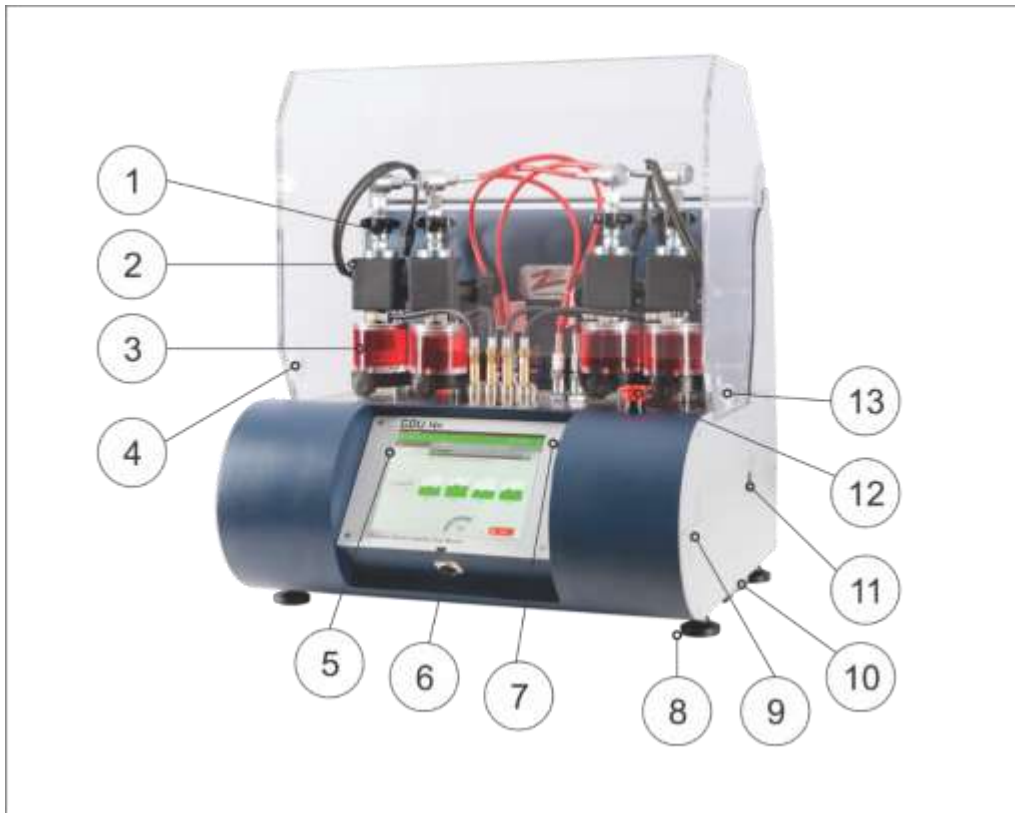


Figure: GDU.4R

1. Gasoline Injector (Not included)
2. Injector Harness Cables
3. Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED
4. Protective Hood
5. Control Panel / PC
6. USB Port
7. On/Off Switch for PC
8. Cushioned / Adjustable support pads
9. Air Vents
10. Carrying Handles
11. Test Oil level Indicator
12. Emergency Stop Switch
13. Test Oil Fill Port

GDU.2R

Intended Use

This unit can automatically and fully Test and Clean up to 1 HP Gasoline Direct Injector. It has the capability to fit SPR and RSP adapters on Common Rail injectors. This unit uses a Dynamic Mass Metering system.

Front View

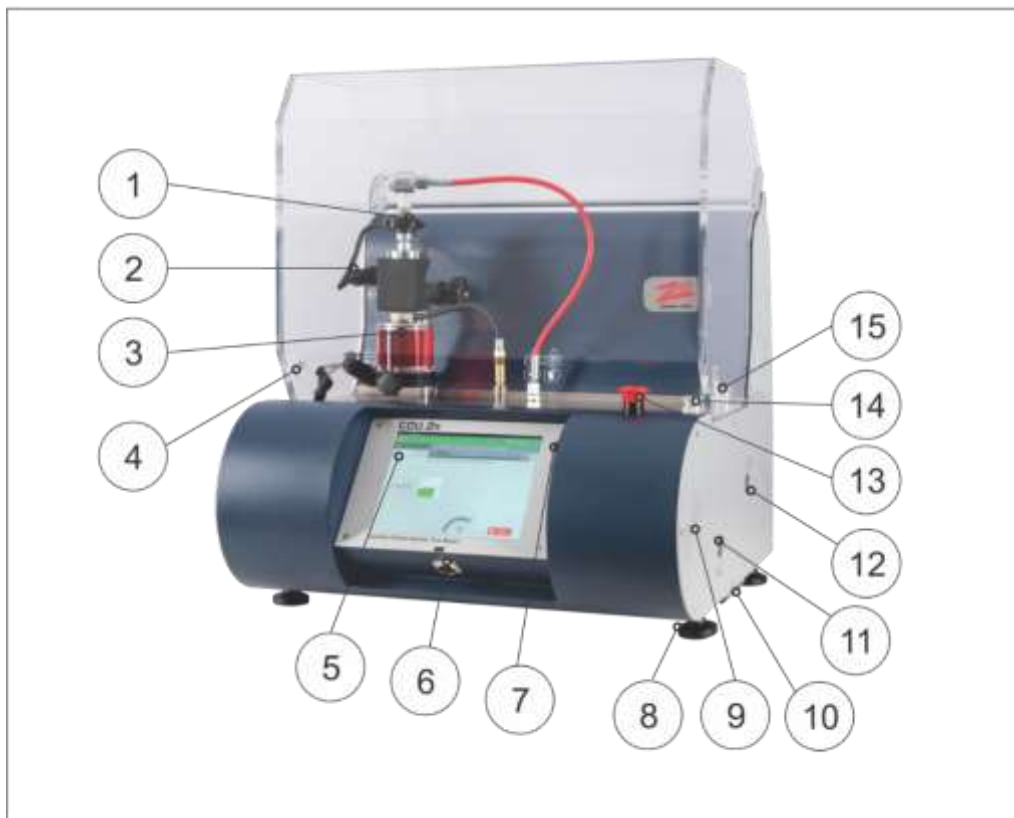


Figure: GDU.2R

1. Gasoline Injector (Not included)
2. Injector Harness Cables
3. Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED
4. Protective Hood
5. Control Panel / PC
6. USB Port
7. On/Off Switch for PC
8. Cushioned / Adjustable support pads
9. Air Vents
10. Carrying Handles
11. MACC level Indicator
12. Test Oil level Indicator
13. Emergency Stop Switch
14. MACC Fill Port
15. Test Oil Fill Port

DS-R

Intended Use

This unit can fully Test and Clean up to 1 Common Rail Injector. It has the capability to fit SPR and RSP adapters on Common Rail injector. In addition, it supports EUI (UIPR-A) and HEUI (HUIR-A) Attachment units, that can perform testing of these Pump-Injectors 1-by-1 and also use RSP and BIP adapters. This unit comes in an automatic (D) & semi-automatic (A) version and uses an Electronic Volumetric Measuring Unit or Volumetric Tubes for measuring the injected volume. User intervention is needed in the (A) units to complete the test for adjusting the Test Pressure and Entering the Volumetric Data.

Front View

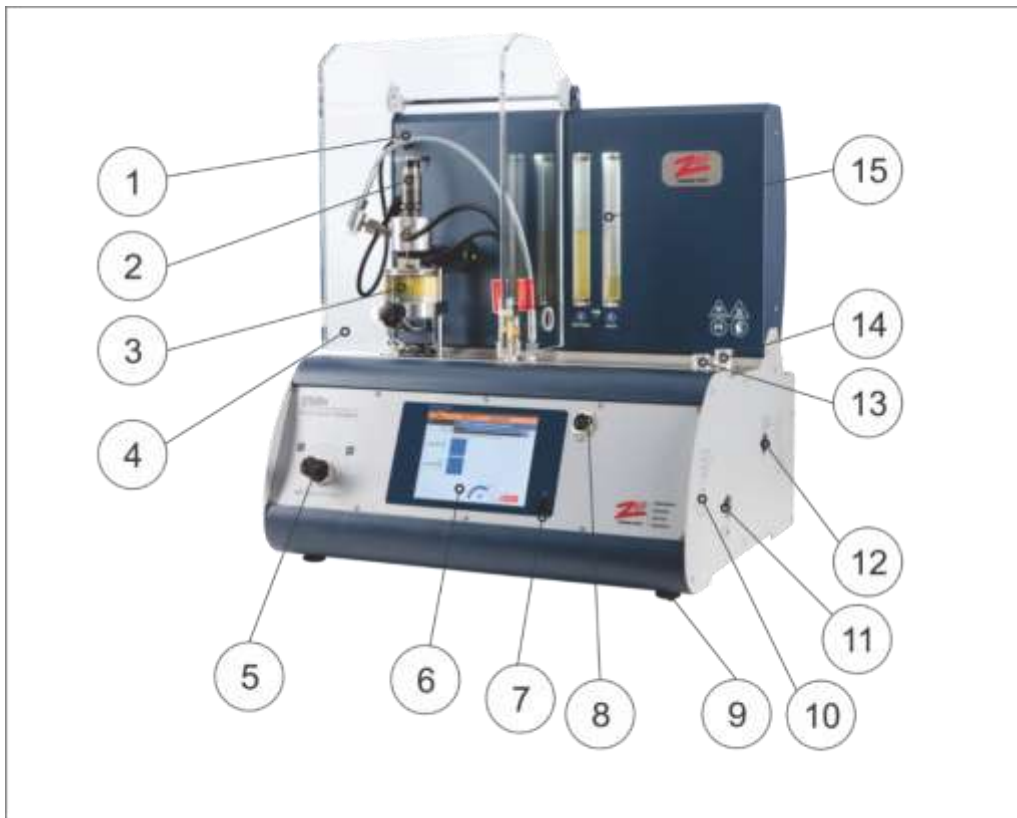


Figure: DS-R

1. *Injector Harness Cables*
2. *Diesel Injector (Not included)*
3. *Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED*
4. *Protective Hood*
5. *HP Knob for controlling the Pressure (Manual HP Machines only)*
6. *Control Panel / PC*
7. *On/Off Switch for PC*
8. *USB Port*
9. *Adjustable support pads*
10. *Air Vents*
11. *MACC level Indicator*
12. *Test Oil level Indicator*
13. *MACC Fill Port*
14. *Test Oil Fill Port*
15. *Volumetric Tubes (Non-Electronic Measuring unit machines only)*

DSF-R

Intended Use

This unit can Clean and Flush up to 4 Common Rail Injectors simultaneously. In addition, it supports EUI (UIPR-A) and HEUI (HUIR-A) Attachment units, that can clean/flush these Pump-Injectors 1-by-1. The Unit comes with 2 tanks for cleaning and flushing.

Front View

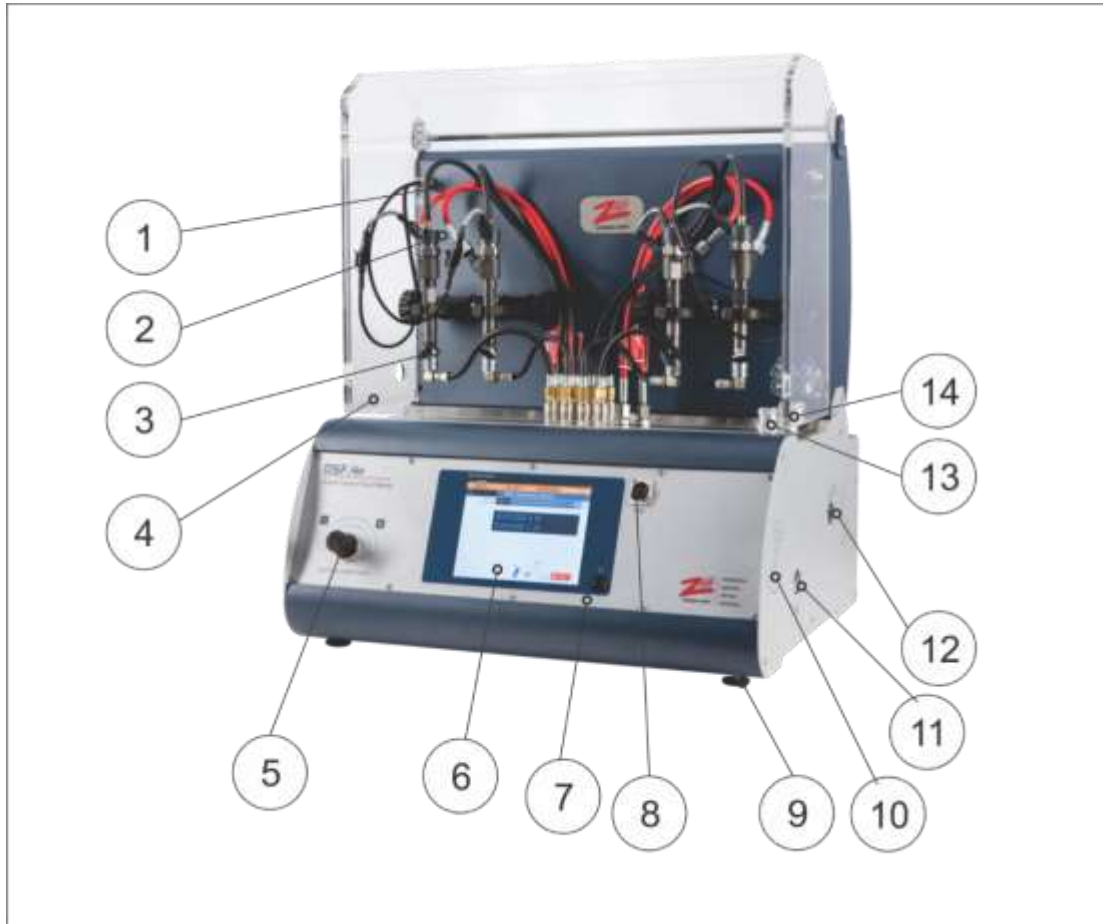


Figure: DSF-R

1. *Injector Harness Cables*
2. *Diesel Injector (Not included)*
3. *Injector Clamp (D-Adapt mounted)*
4. *Protective Hood*
5. *HP Knob for controlling the Pressure (Manual HP Machines only)*
6. *Control Panel / PC*
7. *On/Off Switch for PC*
8. *USB Port*
9. *Adjustable support pads*
10. *Air Vents*
11. *MACC level Indicator*
12. *Test Oil level Indicator*
13. *MACC Fill Port*
14. *Test Oil Fill Port*

GD-R

Intended Use

This unit can fully Test and Clean up to 1 HP Gasoline Direct Injector. This unit comes in an automatic (D) & semi-automatic (A) version and uses an Electronic Volumetric Measuring Unit or Volumetric Tube for measuring the injected volume. User intervention is needed in the (A) units to complete the test for adjusting the Test Pressure and Entering the Volumetric Data

Front View

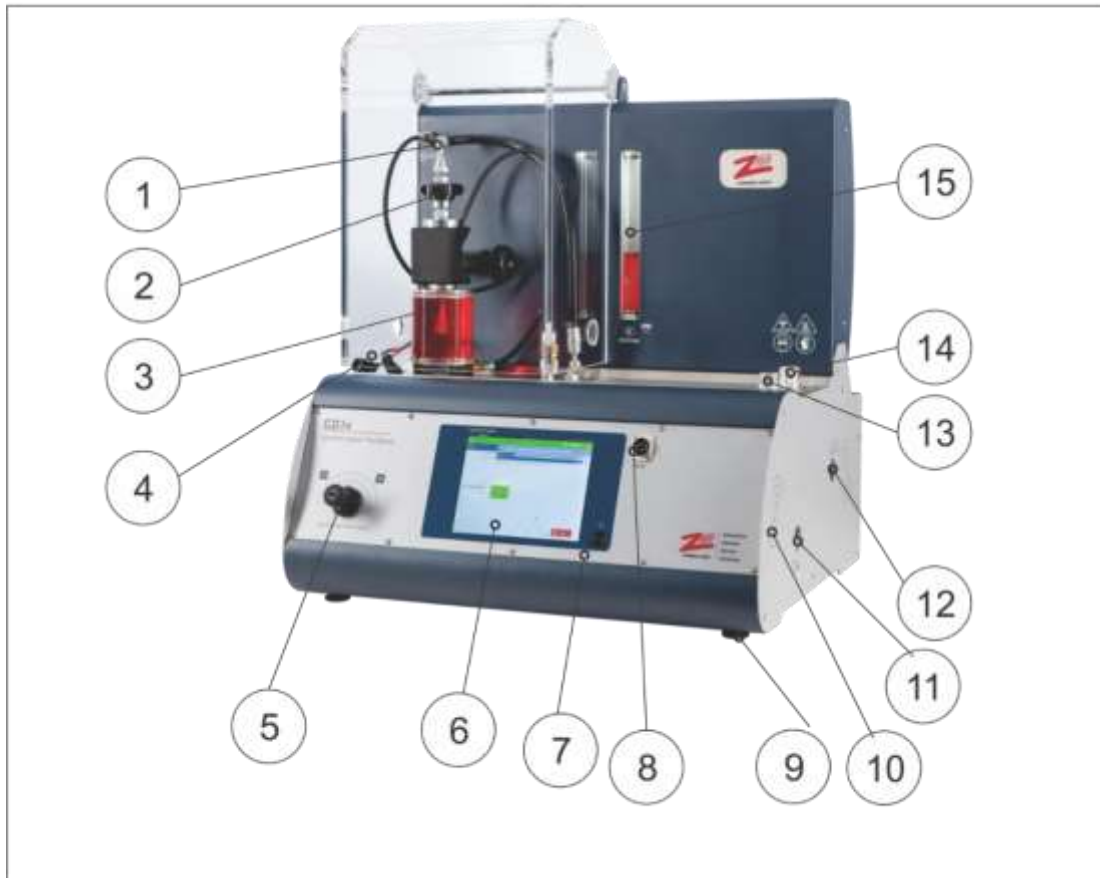


Figure: GD-R

1. *Injector Harness Cables*
2. *Gasoline Injector (Not included)*
3. *Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED*
4. *Protective Hood*
5. *HP Knob for controlling the Pressure (Manual HP Machines only)*
6. *Control Panel / PC*
7. *On/Off Switch for PC*
8. *USB Port*
9. *Adjustable support pads*
10. *Air Vents*
11. *MACC level Indicator*
12. *Test Oil level Indicator*
13. *MACC Fill Port*
14. *Test Oil Fill Port*
15. *Volumetric Tube (Non-Electronic Measuring unit machines only)*

UIP-R

Intended Use

As an attachment to the main units CRU / DS, or as a standalone unit, it will provide the capability to Test and/or Clean EUI Injectors and Pumps.

Front View



Figure: UIP-R

1. CAM securing lock
2. Protective Hood
3. Adapter Connections
4. Adjustable support pads
5. (LP) Low Pressure gauge
6. Test Oil level Indicator
7. MACC level Indicator
8. Injection Connections
9. Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED
10. EUI Injector (Not included)
11. Plunge ROD
12. CAM Adjuster (always use the headless screw to secure)

HUI-R

Intended Use

As an attachment to the main units CRU / DS, or as a standalone unit, it will provide the capability to Test and/or Clean HEUI Injectors.

Front View



Figure: HUI-R

1. Protective Hood
2. Adapter Connections
3. Hydraulic Oil Gauge
4. Hydraulic Oil Adjusting Knob (Adjust on each TP)
5. Hydraulic Oil level Indicator
6. (LP) Low Pressure gauge
7. Test Oil level Indicator
8. MACC level Indicator
9. Adjustable support pads
10. Injection Connections
11. Injector Clamp / Discharge Height Adjuster (iPSC mounted) with LED
12. HEUI Injector (Not included)

TBCR

Intended Use

This unit, is a Conventional Test Bench Electronic Control & Measurement Unit / Test Bench Simulator for Diesel Specialists

It comes in many versions, and the connections and component capability change and are dependent on the specific version.

Front View

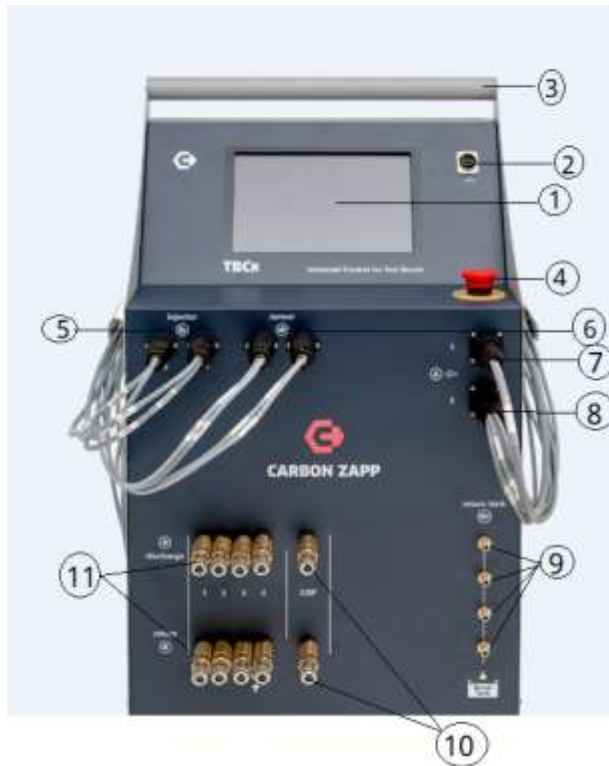



Figure: TBCR

1. Control Panel / PC
2. USB Port
3. Carrying Handles
4. Emergency Stop Switch (*RDS Calibrate Maintenance Section More Information/Instructions)
5. Injector Harness Cables
6. Sensor Cables
7. Extension Harness for HK1400A
8. HP Pressure Control/Control Pump/LED BCR Kit
9. Return Tank Hoses
10. Pump Hoses Connections
11. Injector Hoses Connections

All requirements must be met by the operator prior to initial setup of TBCr unit (NOT included Common Rail Pump, we suggest 0445010081, 0445010090, 0445010107, 0445010125, 0445010213, 0445010343, 0445020037, 0445020039, 0445020105, 0445020026, 0445020057)

Electrical and Hydraulic Connections

Notes: if you don't have BCR Kit you have to calibrate RDS before use (for further clarifications please contact with our Support Department (e-mail: support@carbonzapp.com))

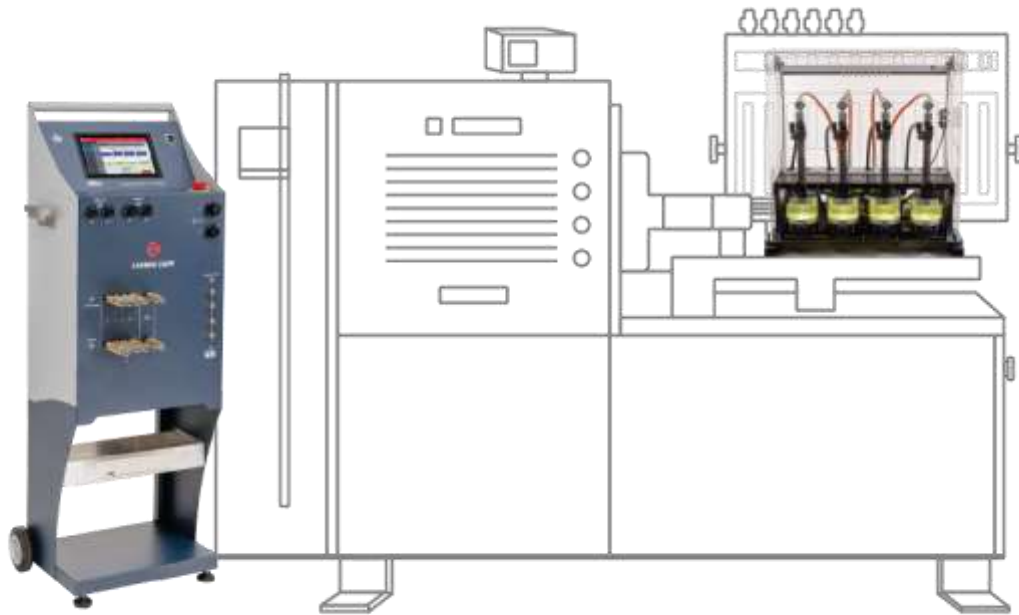

DCD

Intended Use

This Control Module, is a CRDi Injector Control Module, Electronic Measurement & Coding device for any Standalone Test Bench

It comes in many versions, and the connections and component capability change and are dependent on the specific version.

Front View



Figure: DCD

1. Control Panel / PC
2. Adjustable support pads
3. On/Off Switch for PC
4. USB Port
5. Air Vents / Side Panel
6. Emergency Stop Switch (only for DCDS models *RDS Calibrate Maintenance Section More Information/Instructions)
7. HP Pressure Control (only for DCD models)
8. Injector Hoses Connection
9. Injector Harness

All requirements must be met by the operator prior to initial setup of DCDr unit (NOT included Common Rail Pump, we suggest 0445010081, 0445010090, 0445010107, 0445010125, 0445010213, 0445010343, 0445020037, 0445020039, 0445020105, 0445020026, 0445020057)

Electrical and Hydraulic Connections

Notes: if you don't have BCR Kit you have to calibrate RDS before use (for further clarifications please contact with our Support Department (e-mail: support@carbonzapp.com))

ECMR

Intended Use

This Control Module, is a Test Bench & Component Electronic Control Module for All CRDi, GDi, HEUI Activation Profiles & Data For All Types & Makes / Control & Data / Test Bench Pressure Control Simulator

It comes in many versions, and the connections and component capability change and are dependent on the specific version.

Front View



Figure: ECMR

1. Control Panel / PC
2. Adjustable support pads
3. On/Off Switch for PC
4. USB Port
5. Air Vents / Side Panel
6. Sensor Harness Cables
7. Injector Harness Cables

Electrical and Hydraulic Connections

Adapters

Flush-Adapter



This is the standard adapter for Discharge of the injector.

SPR



This adapter is for visually checking the Spray of the injector (different for Gasoline and Diesel Injectors) on every TP, at pressures up to 2500bar. This adapter is optional. MACC feature should not be used with this adapter.

RSP



This adapter is for performing the RSP and aNOP Tests. This adapter is optional for All codings (BC.01/DLC.03/DNC.04/VC.05)

CRIN

Various adapters are available for CRIN (and other side-feed CR Injectors), for adapting on to the machine. These adapters are optional.

EUI

Various adapters are available for EUI /EUP (Injectors and Pumps), for adapting on to the machine. These adapters are optional.

HEUI

Various adapters are available for HEUI Injectors, for adapting on to the machine. These adapters are optional.

Commissioning

Installation

Once unpacked, install the unit on a steady, leveled bench that can support its weight. Some surrounding space should be free for better ventilation and maintenance.

Electrical Connections

INFO: Reference the Rating Plate on the rear of the unit, and technical specifications section.

1. Switch off the unit
2. Connect the power cord to the unit
3. Connect the other end of the cord to a live and grounded outlet.

Compressed Air Connections

INFO: Reference the Rating Plate on the rear of the unit, and technical specifications section.

ALWAYS: Adhere hose length and diameter, and compressor capacity according to the specifications.




ALWAYS: Purify the air coming to the unit, so it is free of water, oil and particles.


1. Close the air supply from the compressor
2. Connect the necessary hose connector (not in scope of delivery), on the rear of the machine (if required)
3. Connect and secure the Air Supply hose on the machine connector
4. Open the air supply from the compressor.

Attachment Unit Connections

The Attachment units are usually self-powered and do not need to be connected to an external outlet. However, the Attachment unit need 1 or more connections to the main unit for Electrical signals and Hydraulic. The Electrical connections for Injector pulse, RSP and BIP use extension cables from the Main Unit.

A list of common connection diagrams is shown below:

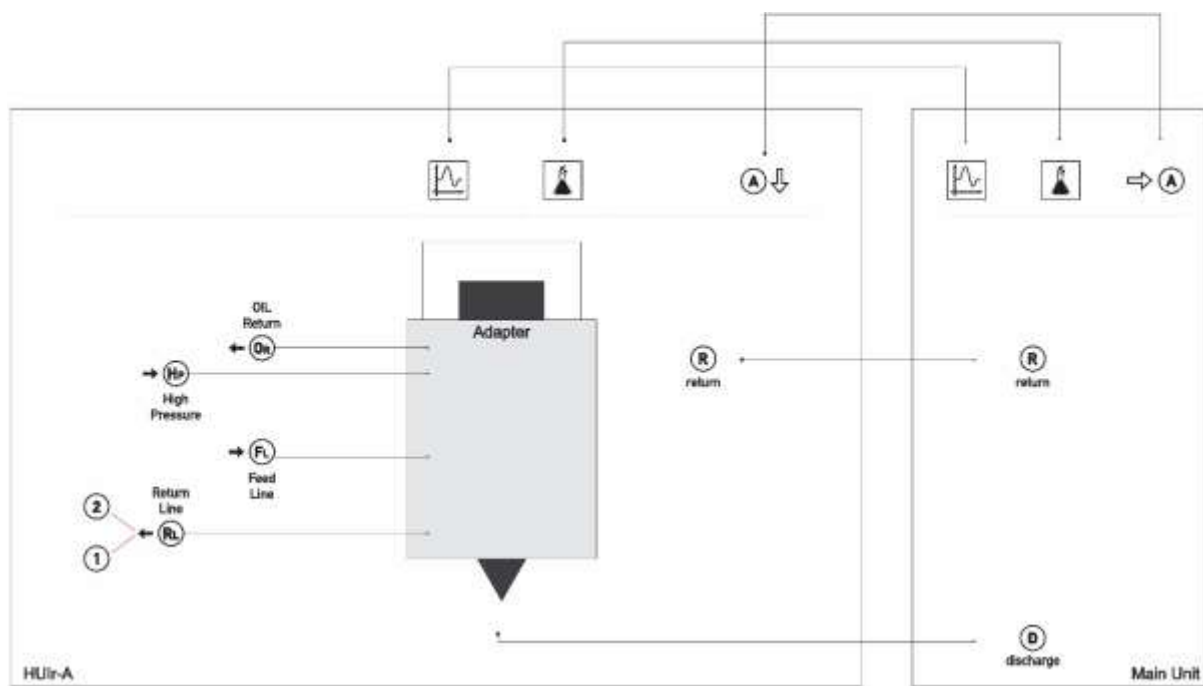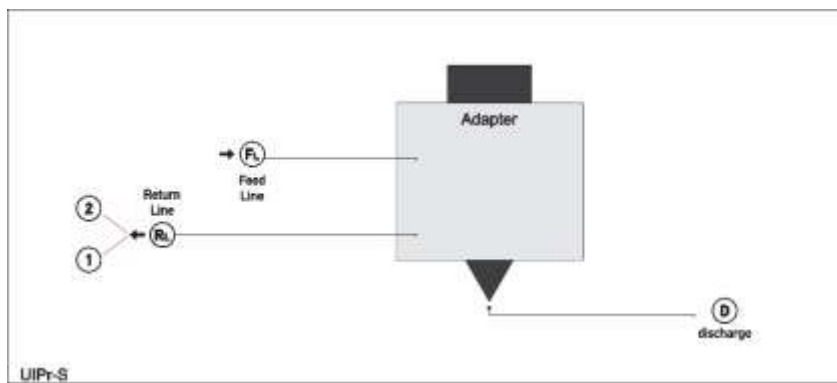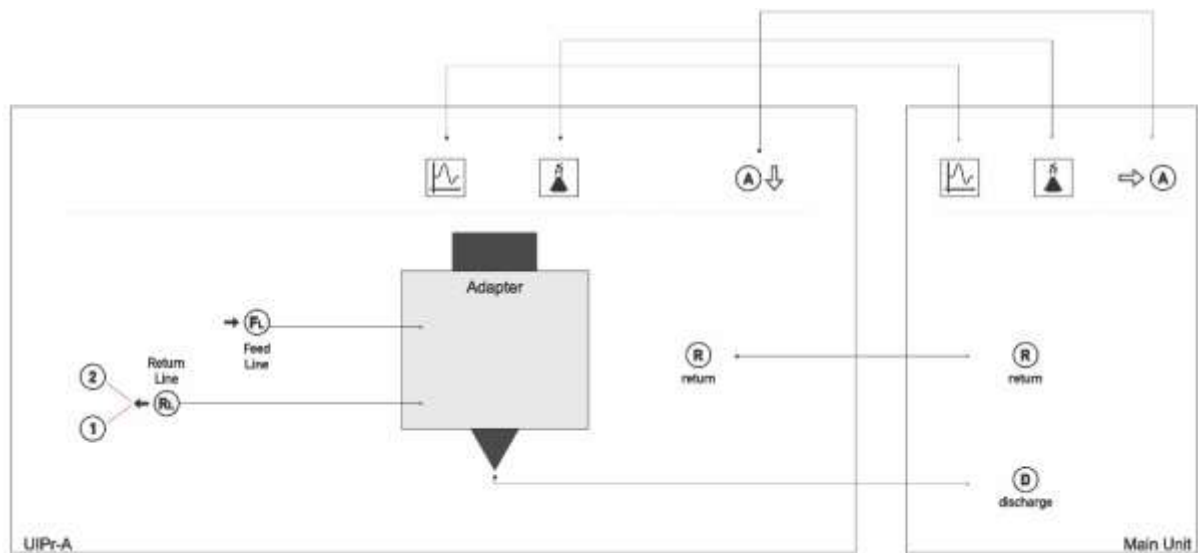

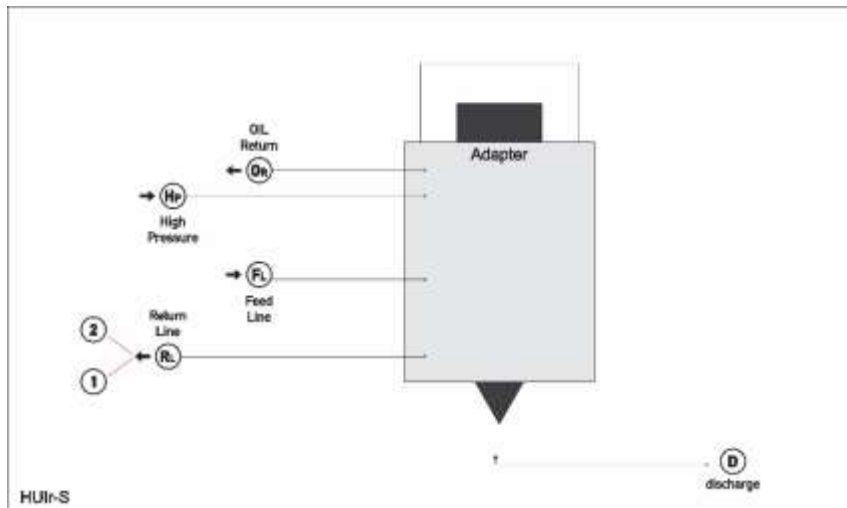


Filling the Tanks

All Tank ports are marked according to the type of fluid:

MACC: For Cleaning fluid (MACC Function)



TEST: For Calibration Test Oil



TEST.OIL: For Hydraulic High Pressure Oil (HEUI System), use ISO 4113



The procedure is the same for all types of Fluids:

1. Assure the correct filter is placed for this tank
2. Open the Cap for the Tank Port
3. Using the provided funnel, fill with the specific Oil on to the point Marked at the same tank level indicator
4. Close the tank port cap

After the first use, the level may drop, since the hydraulic system and filter will fill as well.

Tank Level Sensors

In addition to the external level indicators, the units are also equipped with electronic level sensors. In case the Test Oil level is low or the Cleaning (MACC) fluid level is High, the unit will STOP operation and popup a screen message.

Drain the Cleaning Fluid through the rear drain valve, or Add more Test Oil. You can monitor the level sensors in the Service Screen (Settings).

Degassing the system

When Changing a Filter or Fluid, it is necessary to perform a Hydraulic System Degas: Control Panel>>HOME>>Options>>Settings>>Machine>>HP Degas

This function will ensure that the hydraulic system is free of air.

This function should be repeated as many times necessary, if the user feels that the system is not air free. If the system is still with air after 5 times, contact your service provider.

Connection Info:



Filling the Spray Chamber

IMPORTANT: Only use Calibration Testing Oil with the spray chamber.

Use a Funnel to poor Calibration Testing Oil into the Spray Chamber. The Chamber should be as air free as possible.

Once the Spray Chamber is filled for the first time, it is necessary inject oil from an injector for at least 2 minutes at a rich TP in order to eliminate any air pockets and to maximize the efficiency of the measuring unit. The recommended way is in the “Connections and Leaks” screen, step 3/3.

ALWAYS: Empty the Spray chamber and renew the Oil when the Oil color becomes dark or dirty, or when notified by the Control panel.

Switch On/Off the Control Panel / PC

The PC is battery operated, and can be used even if there is no power to the machine.

Switch On the PC: Press the On/Off Switch **pressed for more than 7sec** until the PC Vendor Logo is displayed. Wait for a few seconds for the PC to boot.

Switch Off the PC: Press the On/Off Switch for a few seconds until the POWER OFF message is displayed. Select to Power Off or Reboot.

INFO: Although the PC can stay in Stand-By Mode a few days (Short Press the On/Off Switch), it is recommended to Power Off the PC to conserve battery and battery Life.

Software Setup

Language Selection

All the units are shipped with English as the Default Language. Please change the software locale to the desired by following these steps:

1. Switch On the machine
2. Power ON the PC (Hold the Power button unit the Manufacturer logo appears)
3. Wait for the system to Boot
4. Press the button AZO to run the software
5. Login as “Guest”
6. Goto HOME>>Options>>Settings>>Locale
7. Select the desired language.

Wi-Fi Setup

This PC system is WiFi and internet capable. It is recommended to connect the machine to the WiFi and use the following features:

1. Online Update (and notifications)
2. Wireless Printing Reports via Wifi
3. Synchronizing Reports with the PC (Via Dropbox)

4. Getting Instant support (Via TeamViewer)
5. Sending Report by Email

Steps on how to connect to a WIFI Network:

1. Switch On the machine
2. Power ON the PC (Hold the Power button until the Manufacturer logo appears)
3. Wait for the system to Boot
4. Press the button AZO to run the software
5. Login as “Guest”
6. Goto HOME>>Options>>Settings>>Wi-Fi Settings
7. Select the desired Network
8. Enter the Credentials and connect.

Printer setup

The system is capable of connecting to many different Printers via WiFi, Bluetooth or USB (Only WiFi is provide free of cost).

To connect to the printer:

1. Assure the Printer is powered
2. Connect to the Printer and the Machine on the same WiFi network, or via USB/Bluetooth
3. Open the Printer Application from the Applications list and make the connection
4. Print a test page to verify correct operation.

Personal Data / Accounts

OWNER INFO

Go to HOME>>Options>>Settings>>Owner Info and enter the data for the owner of the machine. This data will be shown on the saved and printed report.

GMAIL


The saved reports can be shared also by Gmail, so long there is internet to the machine. Once this method is selected, the user can setup the Gmail and use it.

Dropbox

The saved reports can be shared also by Dropbox, so long there is internet to the machine. Once this method is selected, the user can setup the Dropbox and use it.

TeamViewer QC

Is a portal to provide service support to the unit from the internet. Once, selected HOME>>Options>>TeamViewer QC, give the 9 digit number to your service representative.

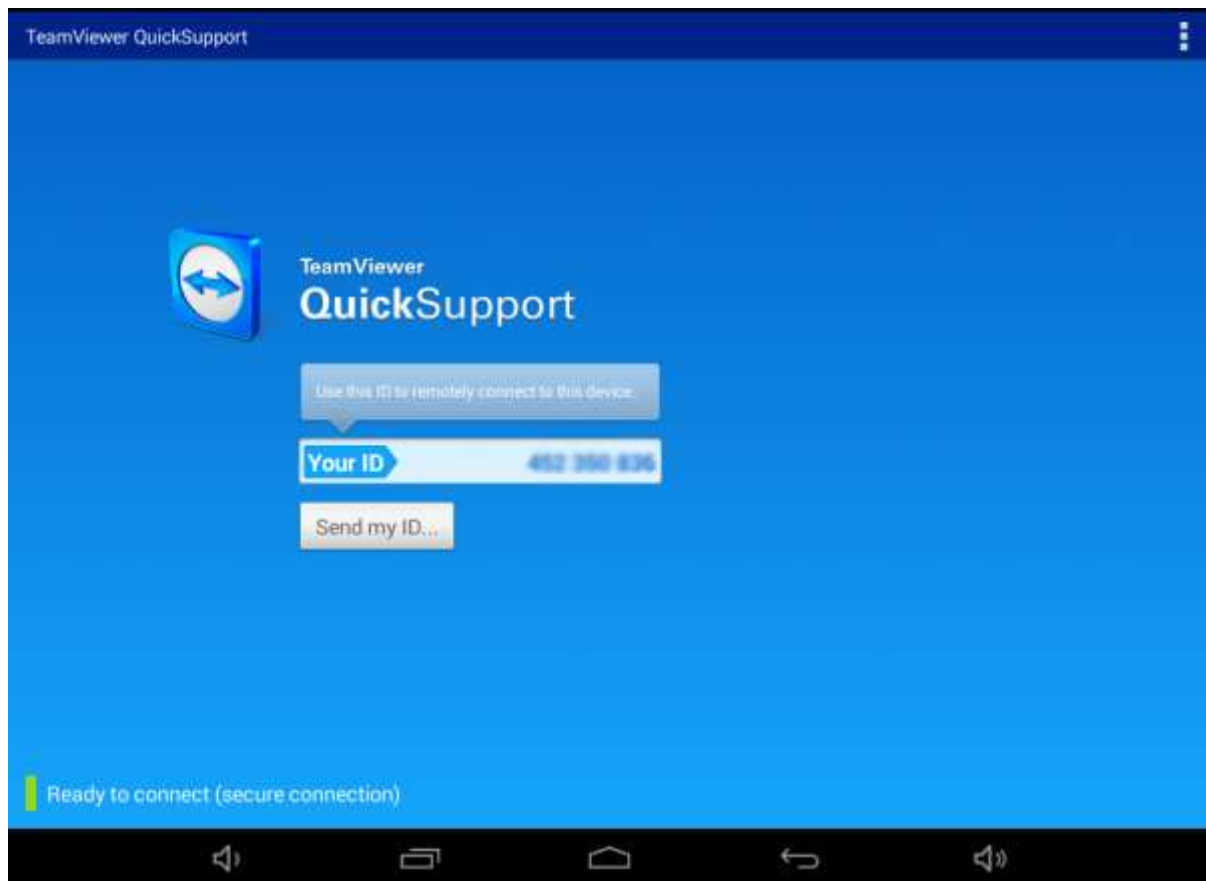


Connection to the PCB / DEMO Mode

The Software “AZO” is designed to run in DEMO Mode whenever there is no connection to the PCB Board or there is loss of power. Once power and connection is restored, the software will restart automatically. The iPSC Led will be lit when the connection is established and NOT in DEMO mode.

Software Orientation

HOME

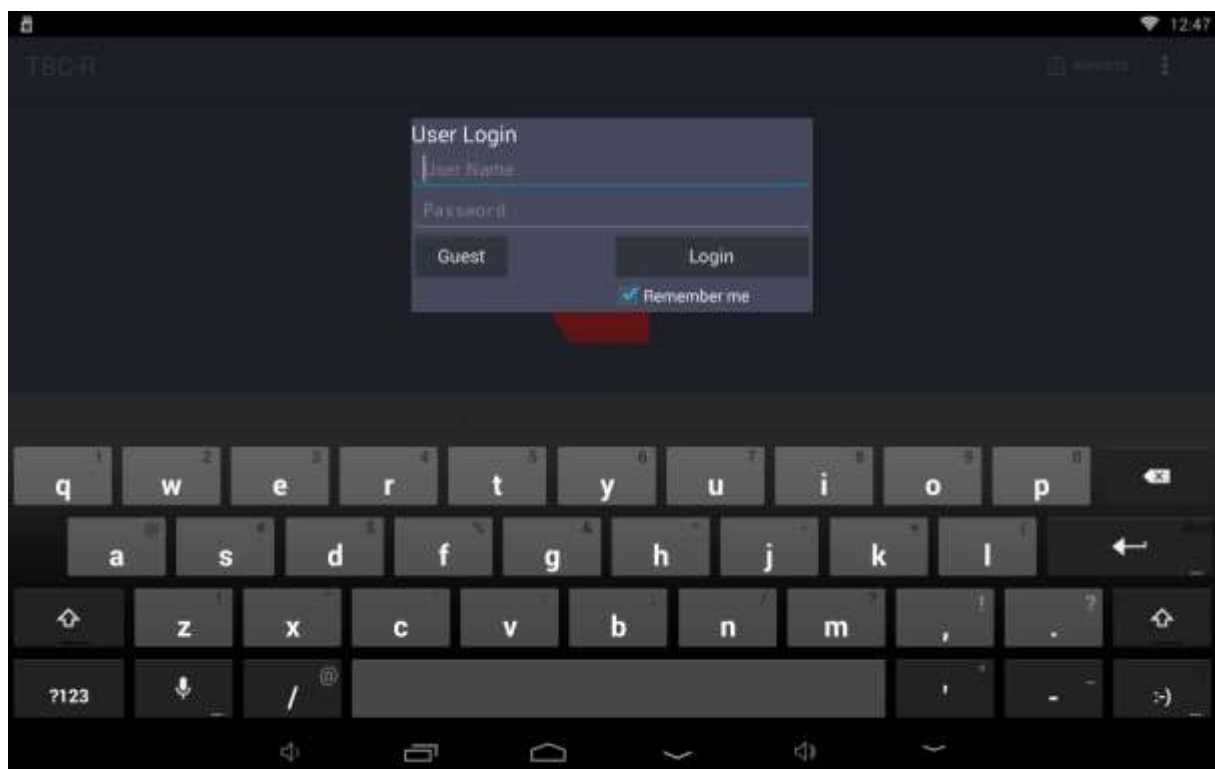



User Logins:

CRU/GDU/MTBR/TBCR

- **Guest** >> Logs in with basic rights.
- Username: **user** / Password: **user1111** (Single Page Report)
- Username: **developer** / Password: **dev1011** (Multi Page Report)

DS/GD/DCDR/ECMR (duplicate / edit / oscilloscope)


- Username: **suser** / Password: **su** (Single Page Report)
- Username: **sdeveloper** / Password: **su** (Multi Page Report)

This is the startup screen of the Application, the HOME Screen. From here the user can access Start a new test, go into the system settings, logout, update the system, ask for remote support and access previously created report

SETTINGS

From the Settings screen, the user can edit the personal information of the machine, connect to a WiFi network, change the locale of the machine, backup/restore personal info, and other service settings.

Logo Display Photo (max 100KB)

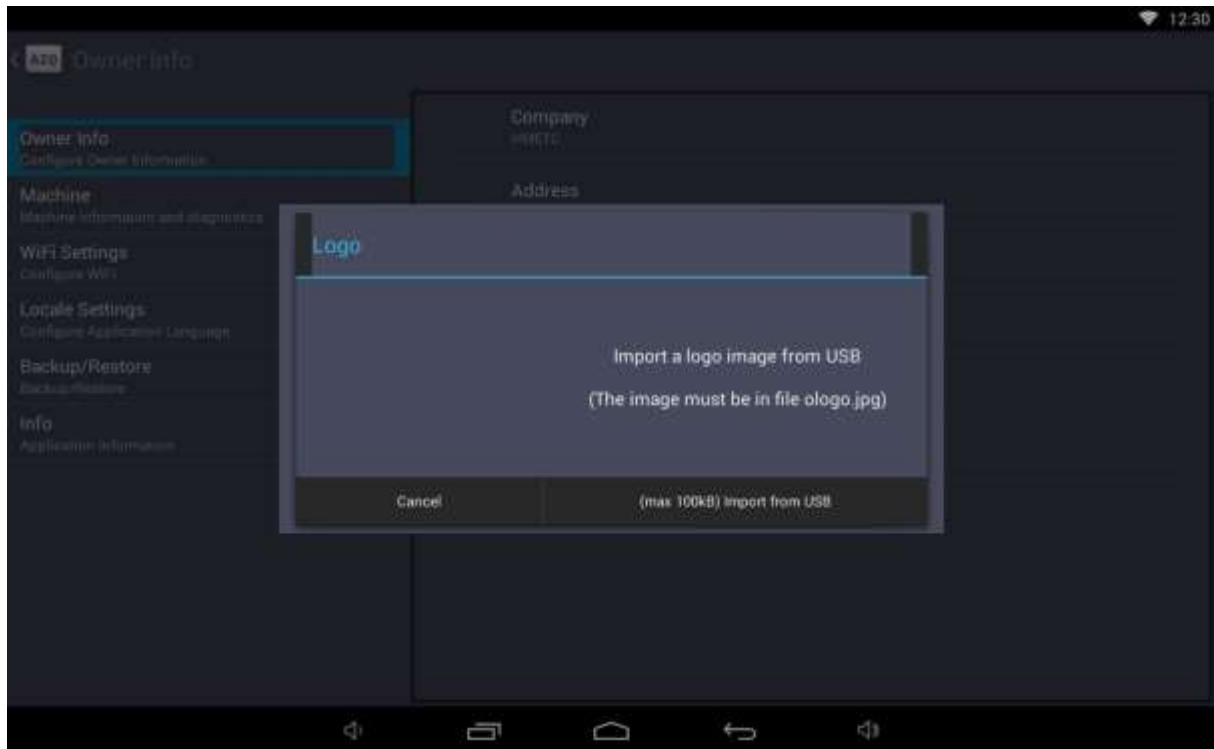

INJECTOR/COMPONENT SELECTION

The user can either scroll through the components, or just search. The search option is divided by space character, so “d 3” (without the quotes) returns results that contain the letter d and also the number 3, in the fields of brand, type and part#.

Once a component has been selected, the Connection Information and a basic diagram of the type of the injector is shown on the right part of the screen, along with information, like the Brand, Types and Maximum Pressure. In addition, the user can select here if MACC (Cleaning) will be performed before testing.

For Advanced users, there is an option to “Duplicate” the component information and edit its basic information. Further editing of TPs is done in the Specific Test Screen.

Start Button selects this profile and continues for further data entry.

CUSTOMER DATA

Enter Client Info

Name: Customer name

Client #: 12345

Company: Company name

License Plate #: AAA 5555

Telephone #: Telephone

email: email@address.com

A screen to provide a point to enter the info of the client.

COMPONENT DATA

0445110130
BOSCH CRI 1

Logged in as user

Enter actuator Info

SLOT 1	SLOT 2	SLOT 3	SLOT 4
SN* 1	SN* 2	SN* 3	SN* 4
FD	FD	FD	FD
IMA	IMA	IMA	IMA

Start

Once the required slots have been selected (multi Slot machines), it is mandatory to enter the Serial Number of the component, since this is the unique identification. Further, the user can also enter other info like Fabrication Data and/or existing Coding of the component.

CFL 1/2/3



The Connection / Leaks screen, help the user with 3 steps to assure the following:

1. Correct connections
2. Component is capable of testing and it is not damaged severely
3. Machine is capable to test the component

Specifically, Step 1/3 applies a low pressure in order to diagnose basic, immediate leaks. Step 2/3 applies maximum component pressure to assure no leak is present. Step 3/3 applies the maximum pressure again but with the component operating, in order to check for machine capability, component operation and adapter leak. The last step can also be used to clear lines and adapters from air.

Advanced users can Skip these steps, although it is not advised for correct operation.

ADJUST HP



In some machines, some options are not automatic, and therefore the user is responsible to adjusting the required pressure and/or feature to the TP.

EUI



Some machines also have an RPM Meter (by proximity sensor), or Low Pressure hydraulic system. For the LP, no sensor is available, rather a Percentile of the maximum capacity, which is 10bar usually.

CRP



SELECT TESTS



In this screen, the user can select which Tests to perform. In addition, the user is informed if the MACC will also perform.

Consider unselecting RSP and NOP if there is no RSP Adapter installed.

From the Options Button, the user can select to enter Manual Mode.

Test plan meanings:

- R2LC: resistance, inductance capacitance test.
- ANOP: automatic nozzle opening pressure test (only with RSP sensor)
- RSP: injector nozzle response test (only with RSP sensor)
- IVM VL: full load injection measurement test
- IVM EM/TL: part load / emissions injection measurement test
- IVM LL: low load/ idle speed injection measurement test
- IVM VE: pre/post injection measurement test
- LKT: static backleak measurement test
- NLT: measure the Nozzle Injector Leak

MACC



For about 15 minutes, the component(s) will Clean with MACC. After this process, the component and lines will automatically Flush with Test Oil, while wasting this Oil in the MACC Tank.


During MACC test you need Flush adapter and when the test is finished you need to remove the Flush adapter and you have to use RSP Sensor or iPSC Chamber.

Once the MACC Step is over, the unit will automatically begin Testing the component(s).

- USON Backflush (only for GD and GDU series)



- REVERSE Backflush (only for GD and GDU series)

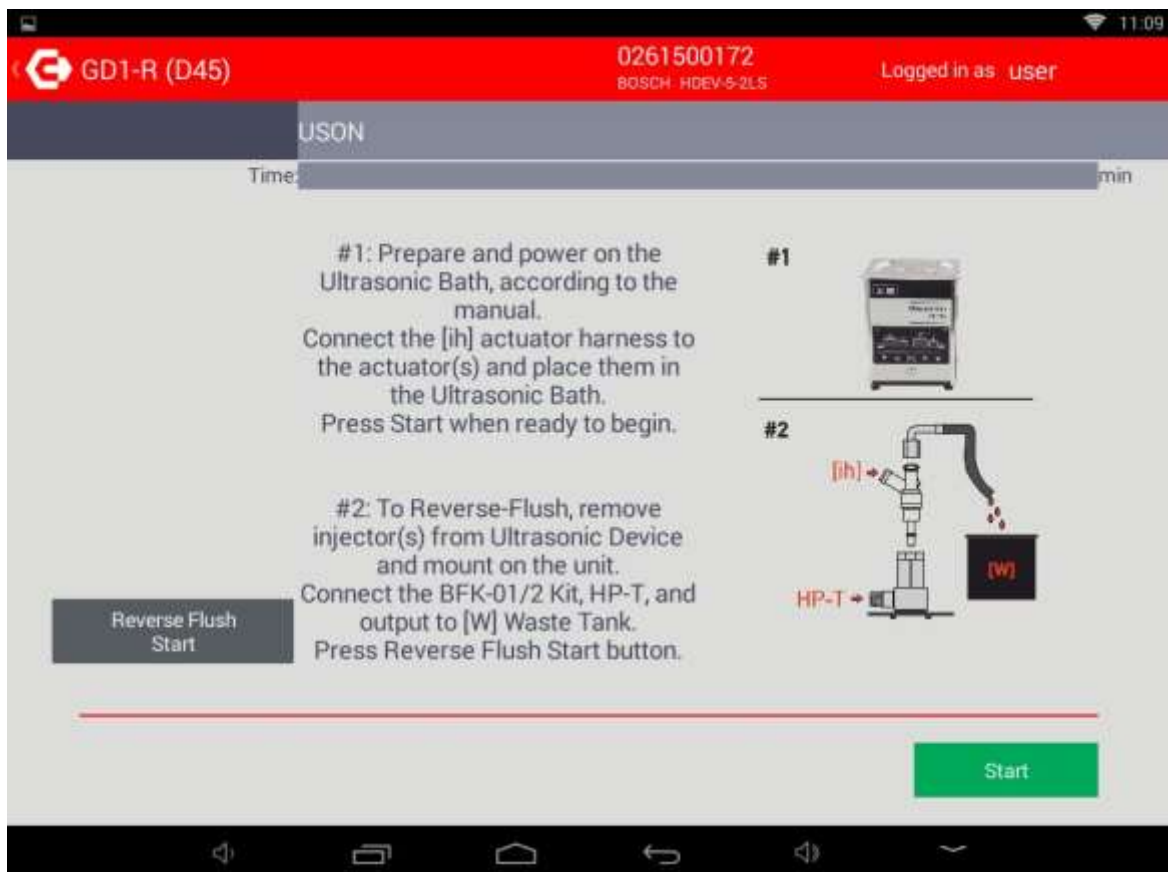

TEST (###)



- Change to Manual mode as shown on the photo
- Change to Quick test then click as shown on the photo (only for DS1R/DCDR/GD1R)

The Test screen is specific for each test, showing the Tanks for each Slot and Measurement, units and time of test.

The Measurement Tank displays a History of measurements and depends on each test.


There are various result sates, depending on the result:

- Blue Color: Very Good Result
- Green Color: Good Result
- Yellow Color: Almost Fail Result
- Red Color: Fail Result
- Orange: Error (High Pressure)

After Conditioning period, if the Pressure is outside the limits, there will be an error displayed.

Advanced users can edit the test and save the changes, by pressing on the Options button and selecting “Edit Test”.


Also a Live Oscilloscope can be shown from the same menu for even more diagnosis.

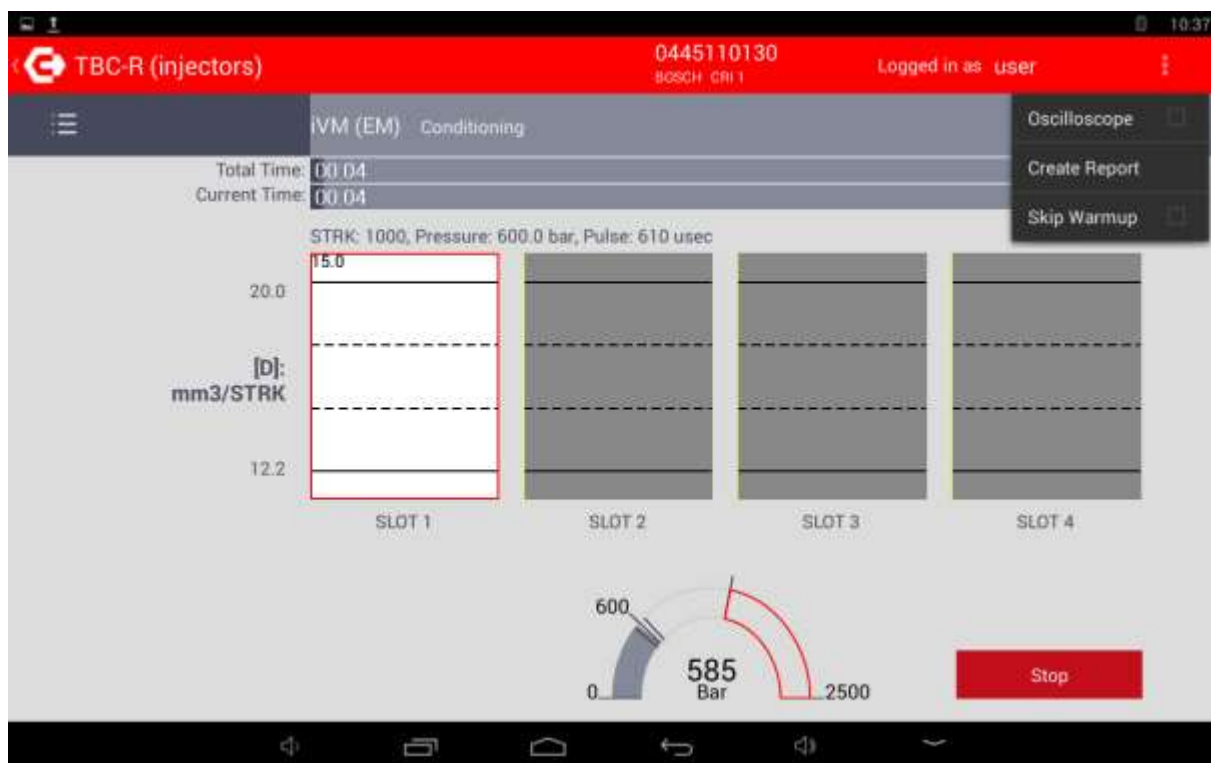

By pressing the Test List button, a List of the tests will be shown.

By Long Pressing a Test with results, a Quick Report will be displayed.

When stopped, by pressing a test from the list, it will repeat it and/or jump directly to it by skipping the in between tests.

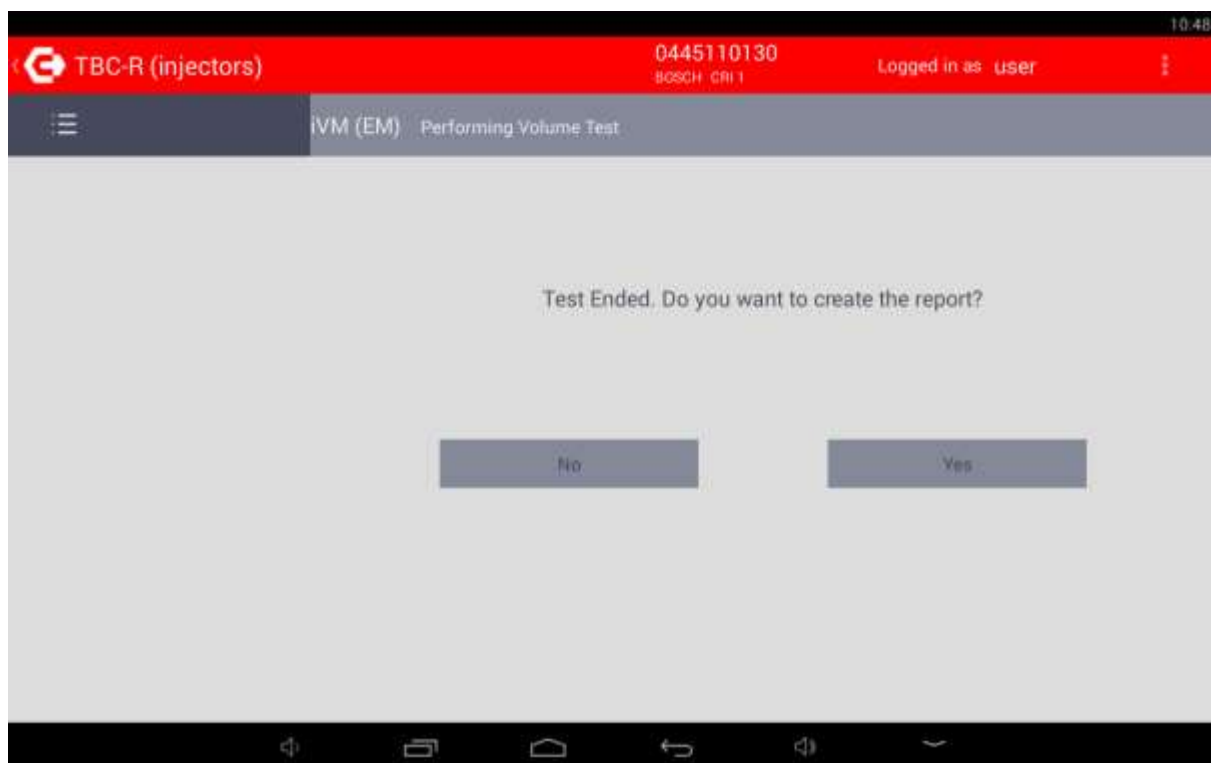

Reports Logged in as: user

Filter reports

2019-02-22 0445110130

2019-02-22 0445010039

CARBON ZAPP

Owner Info

Time: 13:09 Date: 2019-02-22

Report Result: ❌

TBC-R (injectors)
diesel
SW: 1.91.2
S/N: -

Client Info

Tel: email: Client #: License #:

actuator info

	SLOT 1	SLOT 2	SLOT 3	SLOT 4
BOSCH	1	2	3	4
SN*				
FD				
Did IMA				
New IMA				

CFL was skipped!

R2LC

iVM (VL)

Save to USB Delete Share

Once all the tests are finished, the software will ask to create a report or not.

If in Manual mode, this will never be displayed.

REPORTS

Reports Logged in as: user

Filter reports

2019-02-22 0445010039

CARBON ZAPP

Owner Info

Time: 12:54 Date: 2019-02-22

Report Result: ✅

TBC-R (Pumps)
diesel
SW: 1.91.2
S/N: -

Client Info

Tel: email: Client #: License #:

actuator info

	SLOT 1	SLOT 2	SLOT 3	SLOT 4
BOSCH	1234			
SN*				
FD				
Did -				
New -				

CFL was skipped!

Visual check RPM: 2000, Pressure: 300.0 bar, ZME: 1.00 Amp (180Hz)

kenn.1

Save to USB Delete Share

When a Test cycle ends, or directly from HOME >> Reports, the user can access the system saved reports.

There are 3 options once a Report is selected:

- Save to USB: A USB Drive need to be connected to the system. A PDF is saved on that medium with the name of the machine, component and date.
- Delete: This options completely deletes the report
- Share: Share provides a variety of options to share the report, including, but not limited to Printing, Emailing and saving to a Dropbox Folder.

REPORT VERSIONS

Reports

Logged in as basic

Filter reports

Client name
2015-05-14 0445110131

Owner Info

Time 09:31 Date 2015-05-14

Report Result:

CRU: 4-R (30)
diesel
SW: 1.40.17
S/N: -

Client Info

Client name Tel: 003012345678 Client # 123456789
Company name email: abc@company.com License # ABC 11111

Injector Info


SLOT 1 SLOT 4

BOSCH SN* 11111 44444
0445110131 FD
CRI 2.1 Old IMA
New IMA -


Save to USB Delete Share

For Basic Users logged in as Guests.

SHARE

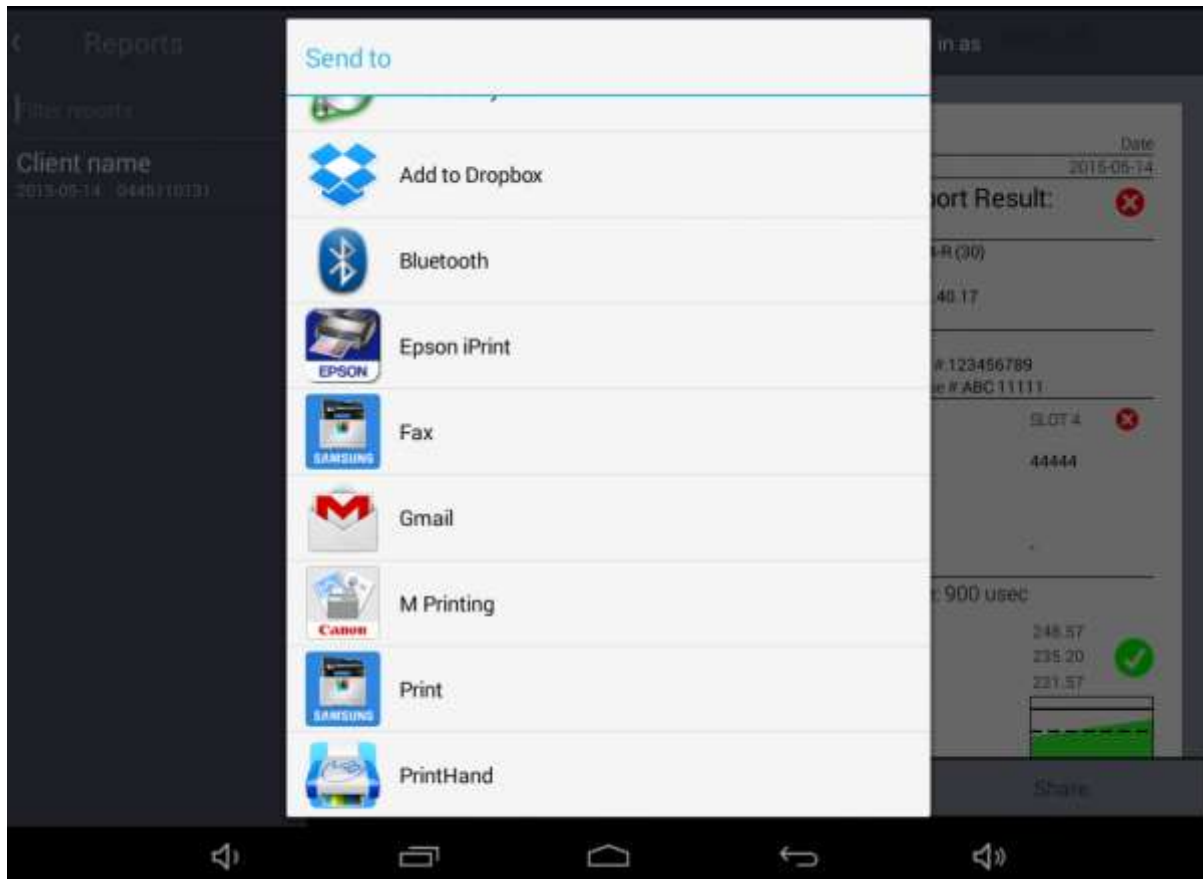

Save to USB

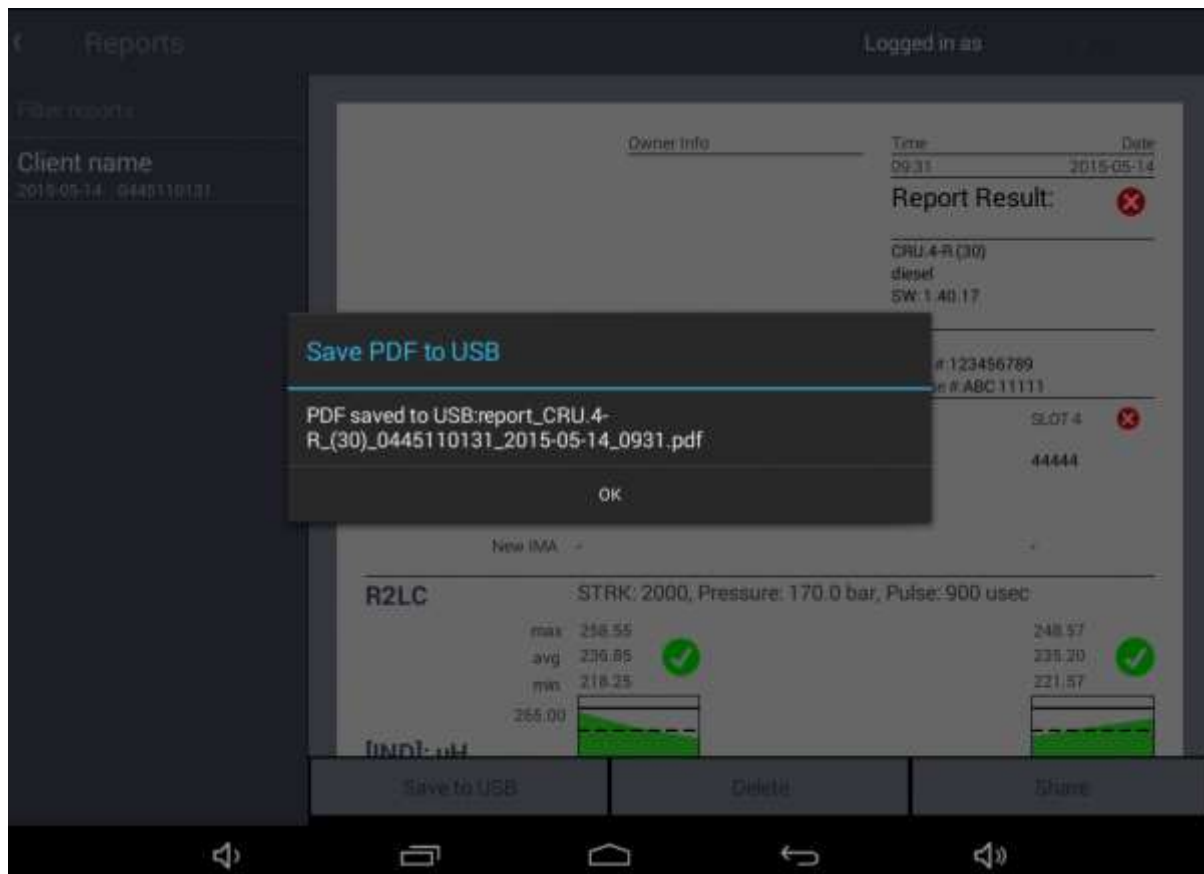

Operation

Before Testing

- Power On the unit and the PC.
- Use Ultrasonic Bath to clean the Injectors and/or Components thoroughly before installing on the machines.

IMPORTANT: FAILURE to clean the component before installing on the machine, could contaminate the hydraulic system and most probably fail the measuring unit, DRV Pressure Control or even the Solenoid Valves. Please note that Warranty is not covered if such contamination is the cause of failure.

Setting up the injector(s) / Pump

Use the provide adapters to fit the injector/component on the unit.

INFO: When performing MACC it is not possible to use the iPSC Adapter, only use the D-Adapt. The RSP adapter could be used, but failures from this procedure will void warranty.

INFO: When NOT using the RSP adapter, it is best to uncheck the tests RSP & aNOP from the list, since they cannot be performed.

INFO: Basic Information on adaptability is provide in the Injector/component selection screen.

INFO: Always use the “Connections / Leaks” screen to assure the injector is connected without leaks.

IMPORTANT: Always take care when connecting HP Hoses. The minimum pending radius is 90mm. Over-bending the hose my result in destroying the hose.

INFO: When using a multi-slot machine, it is possible to connect only specific slots, e.g. Slot-3. In this case the other slot Hoses should be blocked, using the Blind Adapter in the adapter’s kit.

INFO: It is recommended to use grease on the o-rings when installing injectors in adapters. This will avoid damaging the o-rings and will prolong their life.

INFO: Most machines use an adjustable elevation system to fit the D-adapt / RSP / iPSC adapters. Once these adapters are fitted, adjust its height and the fit the injector in the clamp and secure.

Cleaning and Testing the Injector(s)

Once all the components are installed on the unit, and all the connections have been correctly made, follow the Control Panel screen-by-screen in order Clean (MACC), Flush and Test the Component(s).

INFO: When MACC is selected, the machine will automatically perform MACC (apprx. 15 min), Flush the lines and component (approx. 1 min), and then start testing of the component automatically.

A complete test varies depending on machine and component, but can be estimated from 10-30 minutes.

Testing Procedure:

1. Select Machine
2. Select the Injector/Component
 - Follow the connection instructions on-screen
3. Enter the Client Info
4. Enter the Injector/Component Info (Serial Number is Mandatory)
 - Activate/De-activate the required slots (Multi Slot Machines)
5. Follow the 3 Step Process to Check for Connections and Leaks
 - If a Leak is detected, Press STOP and repair
 - STEP 1/3: Low Pressure Static Test
 - STEP 2/3: MAX Pressure Static Test
 - STEP 3/3: MAX Pressure Dynamic Test (With Injection)
 - Once each step is completed, the Time Counter will go on until the user presses the NEXT button
6. Select the required Tests
 - For Advanced users, there is an option to select “Manual Mode” from the Top Right 3 dots option button
 - When performing ONLY MACC, please select only the R2LC as a test, since at least 1 test should be performed.
7. Once the Testing procedure is initiated, the software will follow the list of tests, beginning from the MACC
 - At any point during testing the user can select a test by long pressing on it to get a Quick Report
 - If the test is stopped, the user can select any test from the list and jump to that test, and therefore re-test or skip.
 - For Non-automatic machines, the user is responsible to adjust the Pressure (and also other parameters of the TP). For DS/GD Units where the HP is to be adjusted manually, the user should adjust the HP Control Valve until the HP is slightly higher than the required pressure; the unit will then auto adjust the rest.
 - For Non-Electronic sensor machines, the user is responsible to enter the data on the screen
8. Once the Testing is completed, the user can create a report or terminate the test without a report. In addition, the user can select a test from the list in order to repeat it.
9. If the user selects to create a report, the software will go into the reports screen and preview the last report.

- When creating a report, all reports are saved in the system
 - The user can either save the report on a USB drive, or Share via various system options, like:
 - i. Gmail
 - ii. Dropbox
 - iii. Printer
 - iv. Bluetooth
 - A delete option is also available
10. When returning, the software will jump to the HOME screen, and wait for a new set of instructions from the user.

Results and Reports

INFO: Coding for specific injectors is provide in the report, as long as all the tests are performed and PASS, and the Database in the manufacturers (not a user profile). Coding is only available for units using a Mass Measuring unit.

There are a few types of results and report styles, for easier diagnosis and client handling.

Result Colors:

- Blue: The value of the test is PASS and very good
- Green: The value of the test is PASS and within the operating limits
- Yellow: The value of the test is Almost Passing, the component will soon fail
- Red: The values of the test are FAIL
- Orange: There was an error and test good not complete.

Report Styles:

- Basic: Owner, Client and Component Info with a total result indication (single Page Report)
- Normal: Basic style, including specific test result (single Page Report)
- Expert / Developer: Normal style, including detailed history tanks and min/max/avg results. (Multi Page Report).

Maintenance

Regular Maintenance

- Check for Machine Leaks daily
- Check the Hoses and Cables for raptures or wear. Replace after 2 years or when not in good condition
- Change Filter and Fluids (after replace go to settings machine to reset time of the filters and fluids) when the Control Panel reminds, or when the Fluid becomes Darker. (Note the Discharge and Return Hoses also have small filters,


these filters are also to be replaced



) and In-Line Filters need to be

replaced  , message: CHECK INLINE FILTERS

- Log in as service (username: service password: 12345)

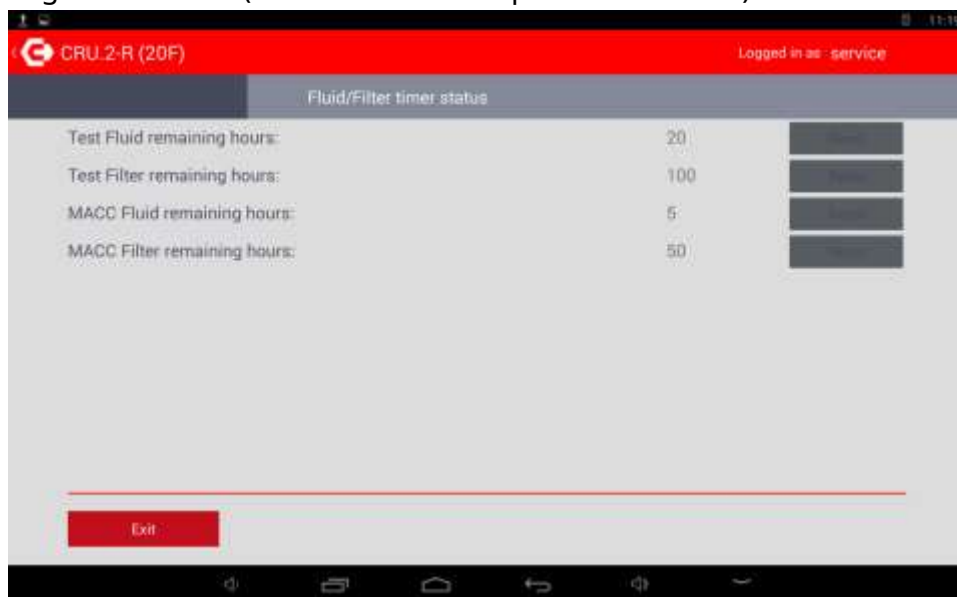

- Regularly change the screen filter in the Discharge and Return Hoses after a 10 injector tests.
- Use Contact Spray for prolonging the life if the cable contacts.
- Filter on the Sensor



- D & R Port



- RDS Calibration

Log in as service (username: service password: 12345) >> Go to 3Dots >> Settings >> Machine >> Service Machine >> Select Calibrate RDS
(Connect ONLY HP Gauge 2000bar)



Note: DCDS & TBCR units on the first startup of the unit before any test

Troubleshooting

Component	Problem	Solution
PC	Not Booting	<ul style="list-style-type: none"> Assure Machine is plugged in a power source and turned on. Switch the unit on/off
	Touch not working	Reboot the system (power on/off)
Pressure	Cannot Reach TP Pressure	<ul style="list-style-type: none"> Assure there is enough liquid in the tanks Assure there is enough Compressed air going into the machine. Assure the hydraulic system is free of air (Degassed) Use the Provided Plug to eliminate a failing injector factor. If the pressure cannot be reached again contact your service provider.
	Pressure on the screen gauge is erratic, and no actual pressure is present	The Software is in DEMO Mode. Reconnect Power to the machine / Check USB Connection
Injection	Injector not injecting	EUI Proximity sensor is not connected / Damaged
	Short Circuit / Open Circuit / Short to Ground	Wrong Injector Profile Selected: Select Correct Component
		Cable Damaged: Replace Cable
		Injector Damaged

Technical Specifications

CRU.4R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	6.5-10.0 bar / 650lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	(2x): 1850 / (3x): 2450
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	ISO4113 / 3.5lt
Test Oil Filter	2 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / 90kg

CRU.2R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	6.5-10.0 bar / 400lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	(2x): 1850 / (3x): 2450
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	ISO4113 / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / 70kg

DS-R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	7.5-10.0 bar / 400lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	(1X): 1100 / (2x): 1850 / (3x): 2450
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	ISO4113 / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / (x0): 50kg – (x1): 60kg

DSF-R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	3-10.0 bar / 300lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	(1X): 1100 / (2x): 1850
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	ISO4113 / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / 75kg

GDU.4R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	6.5-10.0 bar / 650lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	(30): 300 / (55): 550
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	Calibration Oil RDXL / 3.5lt
Test Oil Filter	2 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / 90kg

GDU.2R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	6.5-10.0 bar / 400lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	(30): 300 / (55): 550
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	Calibration Oil RDXL / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / 70kg

GD-R	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Compressed Air	7.5-10.0 bar / 400lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	300
Tightening Torque for High Pressure Connections	25 - 30 Nm
Clamping Diameter	17-32 mm
Test Oil Type / Capacity	Calibration Oil RDXL / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / (x0): 50kg – (x1): 60kg

UIPr	
Compressed Air	6.5-10.0 bar / 300lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	10
Tightening Torque for High Pressure Connections	25 - 30 Nm
Test Oil Type / Capacity	ISO4113 / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 114 cm / 65kg

HUIr	
Compressed Air	6.5-10.0 bar / 300lt/min
Compressed Air Hose	<10m long / Internal Diameter >10mm
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Max Pressure (bar)	300
Tightening Torque for High Pressure Connections	25 - 30 Nm
Test Oil Type / Capacity	ISO4113 / 3.5lt
Test Oil Filter	2 microns
MACC Fluid Capacity	3.5lt
MACC Fluid Filter	8 microns
Hydraulic Oil Type / Capacity	ISO4113 / 3.5lt
Hydraulic Oil Filter	2 microns
Noise Emissions	<71.5dB(A)
Dimensions (W x D x H) / Weight	66 x 77 x 79 cm / 50kg

TBCR	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Dimensions (W x D x H) / Weight	54 x 46 x 131 cm / 66kg

DCDR	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Dimensions (W x D x H) / Weight	35 x 48 x 34 cm / 14kg

ECMR	
Mains Supply	100-240 VAC / 1P / 50-60Hz (+/- 10%)
Rated Current / Fuse	5 A
Rated Power	300 Watt
Storage Temperature	-25 °C - +60°C
Operating Temperature	+5 °C - +45°C
Normal Operating Temperature	+10 °C - +40°C
Dimensions (W x D x H) / Weight	35 x 48 x 34 cm / 14kg